

Fundamental Approach in Groundwater Flow and Solute Transport Modelling Using the Finite Difference Method

M.U. Igboekwe and C. Amos-Uhegbu
*Department of Physics,
Michael Okpara University of Agriculture, Umudike,
Nigeria*

1. Introduction

Water below the ground surface is usually referred to as groundwater. Groundwater has recently become a major source of water supply in almost every sector.

Over-dependence on it for many purposes has led to its' over-exploitation, and this has led to much concern for groundwater assessment and management.

For a proper assessment and management of groundwater resources, a thorough understanding of the complexity of its processes is quite essential. Expansion of human activities causes dispersion of pollutants in the subsurface environment. The fate and movement of dissolved substances in soils and groundwater has generated considerable interest out of concern for the quality of the subsurface environment

Groundwater flow and transport analysis have been an important research topic in the last three decades. This is as a result of many geo-environmental engineering problems having direct or indirect impact by groundwater flow and solute transport. Solute transport by flowing water (dissolved suspended particles) has broad impact in environmental protection and resource utilization via groundwater contamination. The leaching (displacement) of salts and nutrients in soils also has an impact on agricultural production.

To predict the contaminant migration in the geological formation more accurately, many analytical solutions for partial differential equations exist but because of the difficulty in obtaining analytical solutions, numerical solutions are more generally used. Numerical solutions are often more difficult to verify, so mathematical model error has to be kept as small as possible.

Many techniques for solving numerically the solute transport (advection-dispersion) equation are used such as the Finite Element Method (FEM), Finite Difference Method (FDM), Boundary Element Method (BEM), Fuzzy Sets Approach (FSA), Artificial Neural Networks method (ANN), Particle Tracking Method (PTM), Random Walk Method (RWM), Integrated Finite Difference Method (IFDM) etc.

Conventional analysis of groundwater flow is generally made by using the relevant physical principles of Darcy's law and mass balance.

1.1 Review of Darcy's law

In 1856, French engineer Henry Darcy was working on a project involving the use of sand to filter the water supply. He performed laboratory experiments to examine the factors that govern the rate of water flowing through the sand.

The results of his experiments defined the empirical principle of groundwater flow, in an equation now known as Darcy's law which states that "the saturated flow of water through a column of soil is directly proportional to the head difference and inversely proportional to the length of the column". Darcy's apparatus consisted of a sand-filled column with an inlet and an outlet for water.

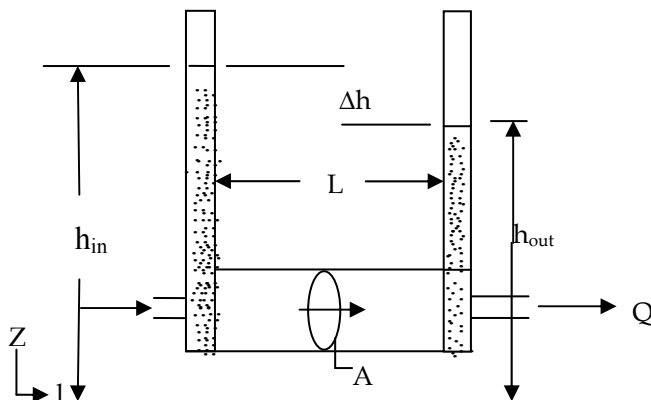


Fig. 1. Darcy's law experiment

Two manometers measure the hydraulic head at two points within the column (h_1 and h_2). The sand is saturated, and a steady flow of water is forced through it at a volumetric rate of Q [L^3/T] (Q is sometimes called the volumetric flow rate or the discharge rate). Darcy found that Q was proportional to the head difference dh between the two manometers, inversely proportional to the distance between manometers l , and proportional to the cross sectional area of the sand column (A).

This can be mathematically written as:

$$Q \propto (h_1 - h_2)$$

$$Q \propto 1/l$$

$$Q \propto A$$

Therefore we can say, $Q \propto A dh/l$

Combining these observations and writing an equation in differential form gives Darcy's law for one-dimensional flow:

$$Q = K(A dh/l) \quad (1)$$

Where Q = volumetric flow rate or the discharge rate (m^3/s), Cross sectional flow area perpendicular to l (m^2), K =hydraulic conductivity (m/s), and d = denotes the change in h over the path l .

It can be re-written in differential form as:

$$Q = -KA(dh/dl) \quad (2)$$

The minus sign is necessary because head decreases in the direction of flow (i.e., water is always flowing from higher hydraulic head to lower hydraulic head). If there is flow in the positive l direction, Q is positive and dh/dl is negative². Conversely, when flow is in the negative l direction, Q is negative and dh/dl is positive. The constant of proportionality K is the hydraulic conductivity in the l direction, a property of the porous medium and the fluid (water) filling the pores. The common units for hydraulic conductivity are meters/year for regional studies, m/day for local aquifer-scale studies, and cm/sec for laboratory studies. Therefore, in some analysis, we often deviate from the rule of using the SI unit.

Another form of the Darcy's law is written for the Darcy flux (or the Darcy Velocity, or, the Specific Discharge) (q) which is the discharge rate per unit cross-sectional area:

$$\begin{aligned} q &= Q/A \\ &= -KA(dh/dl)/A \\ &= -K(dh/dl) \end{aligned} \quad (3)$$

The Darcy flux q has unit of velocity [L/T] and assumes that flow occurs through the entire cross section of the material without regard to solids and pores.

However, Darcy flux is not the actual fluid velocity in the porous media; it is just discharge rate (Q) per unit cross-sectional area.

In a Cartesian x, y, z coordinate system, it is commonly expressed as:

$$qx = -Kx dh/dx \quad (4)$$

$$qy = -Ky dh/dy \quad (5)$$

$$qz = -Kz dh/dz \quad (6)$$

where $Kx, Ky,$ and Kz are the hydraulic conductivity in each of the coordinate direction, respectively. $qx, qy,$ and qz are 3 components of the Darcy flux $\rightarrow q^3$. The $Kx, Ky,$ and Kz are the directional hydraulic conductivity evaluated along each of the coordinate axis. To estimate these directional conductivities, Darcy test can be conducted along the x axis, in which case a horizontal hydraulic conductivity along the x direction can be determined: Kx . Same idea applies to estimating conductivities in the y and z directions.

1.2 Groundwater velocity / limits of Darcy's law

Application of Darcy's law has both upper and lower limits, it does not hold at very high fluid velocities. Hence, the need to calculate the groundwater velocity because the Specific Discharge (Darcy's flux) of equation 3 which is sometimes called Darcy's velocity is not actually groundwater velocity but discharge rate per unit cross-sectional area (Q/A).

Flow of water is limited in pore spaces only, Hence in calculating for the actual seepage velocity of groundwater, the actual cross-sectional area through which the flow is occurring must be accounted for as follows:

$$V = \frac{Q}{\emptyset A} \quad (7)$$

where V = Groundwater velocity, also known as the seepage velocity, and commonly called average linear velocity (m/s),

Q = Volumetric flow rate or the discharge rate (m³/s), A = Cross sectional area perpendicular to l (m²), \emptyset = porosity.

Recall that in equation 3, $\left(\frac{Q}{A}\right) = q = -K(dh/dl)$. Substituting equation 3 into equation 7,

we have $V = -K(dh/dl)/\emptyset$

This is differentially re-written as

$$V = \frac{q}{s} = \frac{-K}{s} \left(\frac{dh}{dx} \right) \quad (8)$$

s is the effective porosity of the porous medium and x the dimension (m) while other symbols remain unchanged.

The nature of flow as quantified by the Reynold's Number is expressed as:

$$(Re) = \frac{\rho v d}{\mu} \quad (9)$$

This is a dimensionless ratio where v = the velocity (m/s), ρ = fluid density (kg/m³), μ = the fluid viscosity (kg/m/s), and d = diameter of the pipe (m).

Experimental evidence indicates that Darcy's law is valid as long as Re does not exceed a critical value between (1 and 10). This law holds for low velocity and high gradient (Shazrah et al 2008).

2. Groundwater modelling

Modeling has emerged as a major tool in all branches of science (Igboekwe et al.,2008).

Models are conceptual descriptions, tools or devices that represent or describe an approximation of a field situation, real system or natural phenomena.

Models are applied to a range of environmental problems mainly for understanding and the interpretation of issues having complex interaction of many variables in the system. They are not exact descriptions of physical systems or processes but are mathematically representing a simplified version of a system. This mathematical calculation is referred to as simulations. Groundwater models are used in calculating rates and direction of groundwater flow in an aquifer.

The simulation of groundwater flow needs a proper understanding of the complete hydrogeological characteristics of the site because the applicability, reliability or usefulness of a model depends on how closely the mathematical equations approximate the physical system being modelled. So, the following should be well investigated and understood:

- Hydrogeologic framework (surface thickness of aquifers and confining units, boundary conditions that control the rate and direction of groundwater flow).
- Hydraulic properties of aquifer (a depiction of the lateral and vertical distribution of hydraulic head i.e initial, steady-state and transient conditions; distribution and

quantity of groundwater recharge / discharge; and sources or sinks being referred to as stresses and they may be constant or transient). Groundwater modelling entails simulation of aquifer and its response to input/output systems.

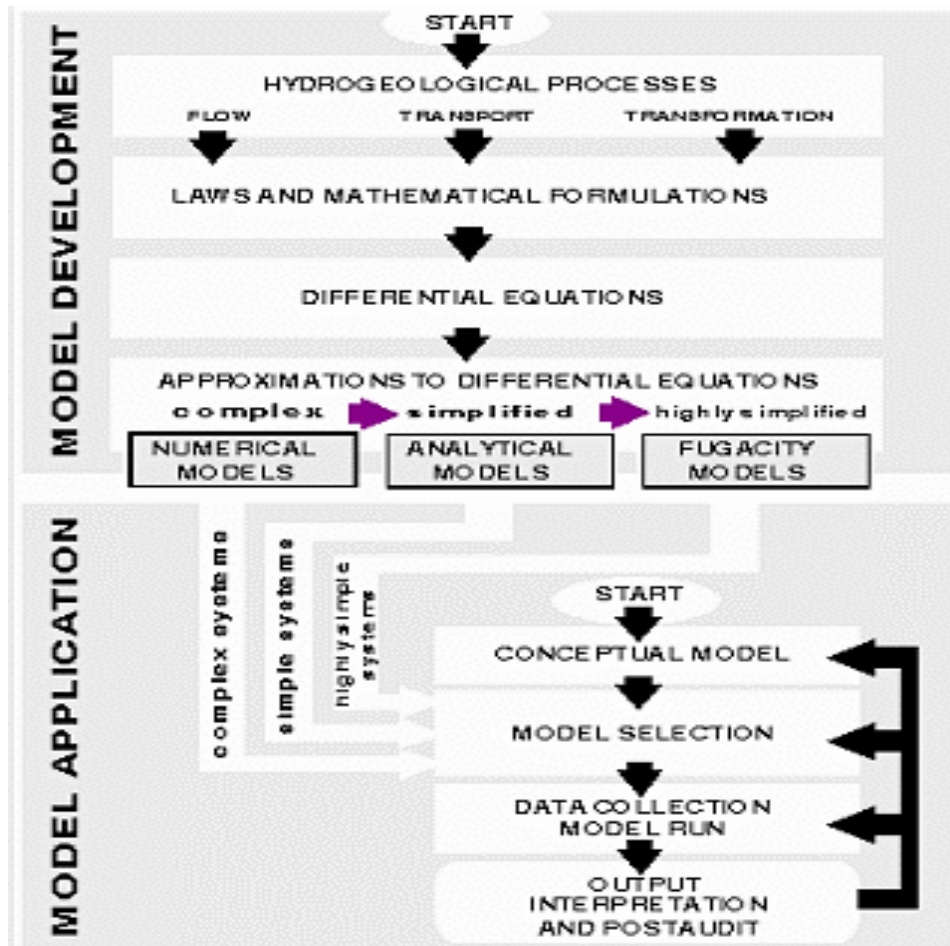


Fig. 2. Development process of a model (Adapted from Kumar 2002).

By mathematically representing a simplified version of a hydrogeological condition, realistic alternative settings can be predicted, tested, and compared.

Groundwater models are used to predict/illustrate the groundwater flow and transport processes using mathematical equations based on certain simplifying assumptions. These assumptions normally involve the direction of flow, geometry of the aquifer, the heterogeneity or anisotropy of sediments or bedrock within the aquifer, the contaminant transport mechanisms and chemical reactions. Because of the simplifying assumptions embedded in the mathematical equations and the many uncertainties in the values of data

required by the model, a model must be viewed as an estimate and not an accurate replication of field settings.

Groundwater models, though they represent or approximate a real system are investigation tools useful in many applications.

Application of existing groundwater models include water balance (in terms of water quantity), gaining knowledge about the quantitative aspects of the unsaturated zone, simulating of water flow and chemical migration in the saturated zone including river-groundwater relations, assessing the impact of changes of the groundwater regime on the environment, setting up monitoring networks and groundwater protection zones (Kumar 2002).

2.2 Types of models

Models could also be classified based on their typical applications; an illustration is below in table 1.

MODEL	APPLICATION
Groundwater flow The problem of water supply is normally described by one equation mainly in terms of hydraulic head. The resultant model providing the solution to this equation is the groundwater flow model.	Water supply, Regional aquifer analysis, Near-well performance, Groundwater/surface water interactions, Dewatering operations.
Solute transport When the problem involves water quality, then an additional equation to the groundwater flow equation is needed to solve for the concentration of the chemical species. The resultant model is the solute transport model.	Sea-water intrusion, Land fills, Waste injection, Radioactive waste storage, Holding ponds, Groundwater pollution.
Heat transport Problems involving heat require a set of equations similar to solute transport equation, expressed in terms of temperature. The resultant model is the heat transport model.	Geothermal, Thermal storage, Heat pump, Thermal pollution.
Deformation Deformation model combines a set of equations that describe aquifer deformation.	Land subsidence.

Table 1. Classification of groundwater models based on their applications (modified after Shazrah et al 2008)

There are other subdivisions of models such as those describing porous media and those of fractured media namely physical scale model, analog model (Hale-Shaw model) etc.

3. Model concept

Groundwater modelling begins with a conceptual understanding of the physical problem. The next step in modelling is translating the physical system into mathematical terms. In general, the results are the familiar groundwater flow equation and transport equations.

3.1 Groundwater flow equation

It is an established hydraulic principle that groundwater moves from areas of higher potential i.e recharge areas (higher elevation or higher pressure/hydraulic head) to areas of lower pressure or elevation. This implies that direction of flow of groundwater ideally follows the topography of the land surface. Cracks, inter-connected pore spaces make a rock material permeable. Some permeable materials may allow fluid to move several metres in a day; while some may move a few centimeters in a century.

In the real subsurface, groundwater flows in complex 3D patterns. Darcy's law in three dimensions is analogous to that of one dimension. This is often derived using a representative fixed control volume element (RFCVE) of fixed dimensions usually a cube.

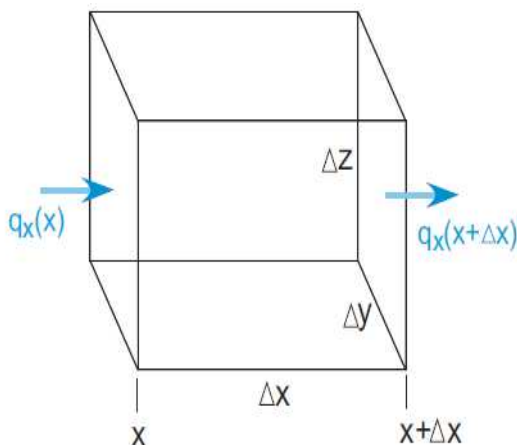


Fig. 3. A Representative Fixed Control Volume Element RFCVE (Mass balance diagram).

Thus on the basis of Darcy's law, the volume of the

$$\text{RFCVE} = \Delta X \Delta Y \Delta Z \tag{10}$$

In this typical mass balance analysis, the water flowing in and out (net flux of mass) through the boundary of the RFCVE is equated to the (time) rate of change of mass within the element:

Mass influx(M/T) – Mass outflux (M/T) = rate of change of mass(M/T).

For example, if 8litres of water flows into the RFCVE every minute(mass influx), and 5litres of water leaks out of it, then the water in the RFCVE experiences a change in storage(net flux

of mass) that is 8litres minus 5litres which is 3litres every minute. This implies that at every minute, the water in the RFCVE increases by 3litres in volume. This net flux of mass (change in volume) is known as change in storage (Ss). But on the other hand, the source of the recharge looses to the RFCVE about 8litres of water per minute, thus giving rise to the terms "source" and "sink".

Let q be the specific discharge, so that the rate of flow of water through the RFVCE can be expressed in terms of the three components q_x, q_y, q_z .

In accordance to the mass balance equation, influx minus outflux is equal to change in storage i.e. ($q_{in} - q_{out}$) = (Ss). Now considering the flow along x -axis of the RFVCE, the influx through the face, $\Delta Y \Delta Z$ is the same with the specific recharge q_x from the x -axis which is $q_x(x)$; the outflux is denoted as $q_x(x + \Delta x)$.

Therefore, $q_x(x) \Delta Y \Delta Z - q_x(x + \Delta X) \Delta Y \Delta Z$ = change in flow along x -axis.

Bringing like terms together

$$q_x(x) - q_x(x + \Delta X) \Delta Y \Delta Z$$

$$q_x(x - x + \Delta X) \Delta Y \Delta Z$$

$$q_x(\Delta X) \Delta Y \Delta Z$$

This is differentially written as; $\frac{dq_x}{dx} \Delta X \Delta Y \Delta Z$ = change in flow rate along x axis.

Therefore, change in flow rate along x -axis =

$$\frac{dq_x}{dx} \Delta X \Delta Y \Delta Z \quad (11)$$

Also, change in flow rate along the y -axis is specified as

$$\frac{dq_y}{dy} \Delta X \Delta Y \Delta Z \quad (12)$$

While that of z -axis is correspondingly given as

$$\frac{dq_z}{dz} \Delta X \Delta Y \Delta Z \quad (13)$$

At this point, the total change in volumetric flow rate is obtained by summing the individual changes in flow rate of the three axes i.e. equations (9), (10), and (11)

$$\left(\frac{dq_x}{dx} \Delta X \Delta Y \Delta Z \right) + \left(\frac{dq_y}{dy} \Delta X \Delta Y \Delta Z \right) + \left(\frac{dq_z}{dz} \Delta X \Delta Y \Delta Z \right)$$

Bringing like terms together,

$$\left(\frac{dq_x}{dx} + \frac{dq_y}{dy} + \frac{dq_z}{dz} \right) \Delta X \Delta Y \Delta Z = \text{total change in flow rate (Change in Storage)} \quad (14)$$

The specific change in storage (Ss) is defined as the volume of water released from storage per unit change in head (h) per unit volume of aquifer i.e.

$$S_s = \frac{\Delta V}{\Delta h \Delta X \Delta Y \Delta Z} \tag{15}$$

$$S_s \Delta h \Delta X \Delta Y \Delta Z = \Delta V$$

Then, the rate of change of storage is given by:

$$\frac{S_s \Delta h \Delta X \Delta Y \Delta Z}{\Delta t} = \frac{\Delta V}{\Delta t}$$

$$S_s \Delta h \Delta X \Delta Y \Delta Z \frac{\Delta h}{\Delta t} = \frac{\Delta V}{\Delta t}$$

So,

$$S_s \Delta h \Delta X \Delta Y \Delta Z \frac{dh}{dt} = \frac{\Delta V}{\Delta t}$$

This could similarly be re-written as

$$-\frac{\Delta V}{\Delta t} = -S_s \Delta X \Delta Y \Delta Z \frac{dh}{dt} \tag{16}$$

Where $\frac{\Delta V}{\Delta t}$ is the rate of change in storage, so by bring equation (16) into equation (14), we get

$$-\left(\frac{dq_x}{dx} + \frac{dq_y}{dy} + \frac{dq_z}{dz} \right) \Delta X \Delta Y \Delta Z = -S_s \Delta X \Delta Y \Delta Z \frac{dh}{dt}$$

By cancelling out like terms on both sides, we get

$$-\left(\frac{dq_x}{dx} + \frac{dq_y}{dy} + \frac{dq_z}{dz} \right) = -S_s \frac{dh}{dt} \tag{17}$$

Going back to equations(4),(5),and (6), we recall that

$$q_x = -k_x \frac{dh}{dx}, \quad q_y = -k_y \frac{dh}{dy}, \quad q_z = -k_z \frac{dh}{dz}$$

Substituting for q_x, q_y, q_z respectively in equation (17), we get

$$-\left\{ \frac{d}{dx} \left(-k_x \frac{dh}{dx} \right) + \frac{d}{dy} \left(-k_y \frac{dh}{dy} \right) + \frac{d}{dz} \left(-k_z \frac{dh}{dz} \right) \right\} = -S_s \frac{dh}{dt}$$

Or

$$\left\{ \left(k_x \frac{d^2 h}{dx^2} \right) + \left(k_y \frac{d^2 h}{dy^2} \right) + \left(k_z \frac{d^2 z}{dz^2} \right) \right\} = S_s \frac{dh}{dt} \quad (18)$$

Equation (16) is the governing equation of a 3D groundwater flow in a confined aquifer because herein, recharge (source) and leakage (sink) is ignored.

As earlier on stated, movement of groundwater is based on a hydraulic principle, therefore a source or sink is usually associated within an elemental volume which is expressed as Q , so the general governing equation of a 3D groundwater flow in an unconfined aquifer (which is the basic assumption) in this context is expressed as:

$$\left\{ \left(k_x \frac{d^2 h}{dx^2} \right) + \left(k_y \frac{d^2 h}{dy^2} \right) + \left(k_z \frac{d^2 z}{dz^2} \right) \right\} - Q = S_s \frac{dh}{dt} \quad (19)$$

where,

K_x, K_y, K_z = hydraulic conductivity along the x, y, z axes which are assumed to be parallel to the major axes of hydraulic conductivity;

h = piezometric (hydraulic) head;

Q = volumetric flux per unit volume representing source/sink terms;

S_s = specific storage coefficient defined as the volume of water released from storage per unit change in head per unit volume of porous material.

Equation (19) is the general governing equation of groundwater flow.

Groundwater flow in aquifers is often modelled as two-dimensional in the *horizontal* plane. This is due to the fact that most aquifers have large aspect ratio like a laminated plane sheet of paper, with horizontal dimensions hundreds of times greater than the vertical thickness. In such a setting, groundwater relatively flows along the horizontal plane, which implies that the z component of the velocity is comparatively small.

Therefore, a two-dimensional analysis is carried out in conjuncture with the use of transmissivity, by assuming that $h=h(x,y,t)$ only (h does not vary with z , thus $(dh/dz = 0)$). This simplification of modeling 3D aquifer flow as horizontal two-dimensional flow is called the Dupuit-Forchheimer approximation.

Thus the groundwater flow equation for *confined* aquifer is

$$\left\{ T_x \frac{d^2 h}{dx^2} + T_y \frac{d^2 h}{dy^2} \right\} \pm Q = S_s \frac{dh}{dt} \quad (20)$$

Where, T_x and T_y is transmissivity in the x and y direction and $T = k * b = (m/day)(m) = m^2/day$, while b is the saturated thickness of the aquifer.

But a situation, where the aquifer becomes *unconfined*, $b = h$, therefore $T = k * h$, so the equation (20) reduces to

$$\left\{ K_{xh} \frac{d^2 h}{dx^2} + K_y h \frac{d^2 h}{dy^2} \right\} \pm Q = S_s \frac{dh}{dt} \quad (21)$$

Where h is the water level function of x and y .

Then, the partial differential equation of second order for groundwater flow is given as:

$$\frac{d}{dx}\left(K_x h \frac{dh}{dx}\right) + \frac{d}{dy}\left(K_y h \frac{dh}{dy}\right) + \frac{d}{dz}\left(K_z h \frac{dh}{dz}\right) \pm Q = Ss \frac{dh}{dt} \quad (22)$$

where S = storage coefficient; and h = hydraulic head.

3.2 Solute transport equation

The transport of solutes in the saturated zone is governed by the advection-dispersion equation which for a porous medium with uniform porosity distribution is formulated as follows:

$$\frac{\partial c}{\partial t} = -\frac{\partial}{\partial x_i}(c v_i) + \frac{\partial}{\partial x_i} \left[D_{ij} \frac{\partial c}{\partial x_j} \right] + R c \quad i, j = 1, 2, 3 \quad (23)$$

Where,

∂ = delta function meaning change in;

x = the dimension (m);

t = the time (s)

c = concentration of the solute (kg/m^3);

Rc = reaction rate (concentration of solute in the source or sink ($\text{kg m}^3/\text{s}$);

D_{ij} = dispersion coefficient tensor (m^2/s);

v_i = velocity tensor (m/s).

An understanding of these equations and their associated boundary and initial conditions is necessary before a modelling problem can be formulated.

From equation 23 above, the first term on the right hand side represents advection transport and describes movement of solutes at the average seepage velocity of the flowing groundwater.

The second term represents the change in concentration due to hydrodynamic dispersion. Hydrodynamic dispersion is defined as the sum of mechanical dispersion and molecular diffusion.

The third term represents the effects of mixing with a source fluid of different concentration from the groundwater at the point of recharge or injection.

Chemical attenuations of inorganic chemicals can occur by sorption/desorption, precipitation/dissolution, oxidation /reduction, etc.

On the other hand, organic chemicals could be absorbed or degraded through microbial processes thus giving rise to a new set of equation such as:

$$\frac{\partial c}{\partial t} = -\frac{\partial}{\partial x_i}(c v_i) + \frac{\partial}{\partial x_i} \left[D_{ij} \frac{\partial c}{\partial x_j} \right] + R c + Y \quad (24)$$

Where Y represents all the chemical, geochemical and biological reactions responsible for the transfer of mass between the liquid and solid phase or the conversion of dissolved chemical species from one form to another.

Assuming that the reactions are limited to equilibrium-controlled sorption or exchange and first-order irreversible rate (decay) reactions in an isotropic homogenous porous medium, then equation 24 may be written as:

$$\frac{\partial c}{\partial t} + \frac{(\rho b)}{\varepsilon} \frac{\partial \bar{c}}{\partial t} = -\frac{\partial}{\partial x} (cvi) + \frac{\partial}{\partial x} \left[D_{ij} \frac{\partial c}{\partial x_j} \right] + \frac{Rc}{\varepsilon} - \lambda C \frac{\rho b}{\varepsilon} \lambda \bar{c} \quad (25)$$

Where

ρb = bulk density (M L⁻³);

λ = decay constant, or reaction rate (T⁻¹);

C = is the solute concentration sorbed on the subsurface solids (M L⁻³);

$C^=$ is the dissolved concentration of a solute ([M L⁻³] [M L⁻³]);

ε = porosity (L³ L⁻³);

The temporal change in sorbed concentration in equation 25 can be represented in terms of the solute concentration by using the chain rule of calculus as follows:

$$\frac{\partial \bar{C}}{\partial t} = \frac{\partial C}{\partial C} \frac{\partial C}{\partial t} \quad (26)$$

For equilibrium sorption and exchange reaction $\frac{\partial C}{\partial t}$ as well as C is a function of C only.

Hence equilibrium reaction for C and $\frac{\partial C}{\partial t}$ can be substituted into the governing equation to develop a partial differential equation in terms of C alone. The resultant single transport equation is solved for solute concentration, sorbed concentration can be calculated using the equilibrium reaction. The linear sorption reaction considers that the concentration of solute sorbed to the porous medium is directly proportional to the reaction.

$$\bar{C} = K_d C \quad (27)$$

where K_d = distribution coefficient (M⁻¹L³)

This reaction is assumed to be instantaneous and reversible. The relationship between the adsorbed and dissolved concentrations can be described using three possible isotherms: linear, Langmuir and Freundlich.

Thus in terms of the linear isotherm,

$$\frac{\partial \bar{C}}{\partial t} = \frac{\partial C}{\partial C} \frac{\partial C}{\partial t} = K_d \frac{\partial C}{\partial t} \quad (28)$$

Isotherms can be incorporated into the transport model using a retardation factor, R [M L⁻³] (Kutílek and Nielsen 1994; Zheng and Bennett 2002):

$$R = 1 + \frac{\rho b}{s} K_d \quad (29)$$

By substituting equation 27 into equation 24, we get

$$\frac{\partial c}{\partial t} + \frac{(\rho b)}{\varepsilon} K_d \frac{\partial C}{\partial t} = -\frac{\partial}{\partial x} (cvi) + \frac{\partial}{\partial x} \left[D_{ij} \frac{\partial c}{\partial x_j} \right] + \frac{Rc}{\varepsilon} - \lambda C \frac{\rho b}{s} \lambda K_d C \quad (30)$$

Now, substituting equation 28 into equation 29, the resultant equation is as follows:

$$R \frac{\partial C}{\partial t} = -\frac{\partial}{\partial x} (cvi) + \frac{\partial}{\partial x} \left[D_{ij} \frac{\partial c}{\partial x_j} \right] + \frac{Rc}{s} - R\lambda C \tag{31}$$

This equation 31 is the solute transport (advection-dispersion) governing equation based on the assumption that the reactions are limited to equilibrium-controlled sorption.

The solution to this governing equation is identical to the solution for the governing equation without sorption effects, except the velocity, dispersive flux and source are deduced by the retardation factor “R”.

For a given general equation, there is an infinite number of possible solutions. For steady-state flow, the unique and appropriate solution is one that matches the particular boundary conditions (BC) of the conceptual model. (For transient flow system and for solute transport, both initial condition and BC are required to obtain the unique solutions of head and concentrations.)

3.3 Boundary conditions

Boundary conditions indicate how an aquifer interacts with the environment outside the model domain. They include things such as heads at surface waters in contact with the aquifer, the location and discharge rate of a pumping well or a leaching irrigation field. For a distinct solution, at least one distinctive boundary condition is specified.

There are four types of boundary conditions which are derived from the most common two: *specified head* and *specified flux* conditions.

- i. **Constant Head Boundary:** This is a type of specified head boundary condition, in which the head is known and the source of water has a constant water level at the model boundary. This condition is used in modelling an aquifer that is in good interaction with a lake, river or another external aquifer. These are usually where the groundwater is in direct contact with surface water such as a lake or a river and drains interact freely with the aquifer.

This condition is also known as the *first type* boundary condition and it is mathematically referred to as *Dirichlet* boundary.

It is stated mathematically as $h(x) = h_o(x), x \in \delta \cap$, *Dirichlet* Where h_o = the specified head along the boundary segment $\delta \cap$ of the modeled domain \cap .

- ii. **Constant Flux Boundary:** This is a type of specified flux boundary condition also known as the second type of boundary condition, and mathematically known as Neumann’s condition or recharge boundaries. Entering or leaving the aquifer is prescribed/constant flux. This boundary condition is used in simulating rainfall or distributed discharge for instance evaporation and also used in specifying known recharge to the aquifer owing to induced recharge or reticulation.

It is stated mathematically as $\frac{\delta h(x)}{\delta n} = -k \frac{\delta h(x)}{\delta n}, x \in \cap_2$ Neumann

Where $\frac{\delta h(x)}{\delta n}$ is the specified outward normal gradient to the boundary segment $\delta \cap_2$.

- iii. **Mixed Boundary:** This type of boundary condition involves some combination of head and flux specification whereby, the rate of flow in and out of the aquifer is a function of the elevation of the stream bed, aquifer head, and leakage between the aquifer and the stream. For instance, leakage through a silty river bed to an underlying aquifer is

represented by a flux that is proportional to the vertical conductivity of the silt layer and proportional to head difference from the river to the underlying aquifer. It is referred to as the *third type* of boundary condition and mathematically known as Cauchy Robbins condition.

This less common, mixed boundary or induced flux condition is also known as Stream or River Head Dependent Boundary. This boundary condition is used in the modelling of streams in poor connection with the aquifer, upward leakage in artesian aquifers, drains and overlying aquitards.

It is stated mathematically as $\alpha h(x) + \beta \frac{\delta h(x)}{\delta n} = C_o, x \in$

Where C_o is specified function value along the boundary segment δn , α and β are specified functions.

iv. **No flow Boundary:** This is a very special type of the prescribed flux boundary and is referred to as no-flux, zero flux, impermeable, reflective or barrier boundary.

No flow boundaries are impermeable boundaries that allow zero flux. They are physical or hydrological barriers which inhibit the inflow or outflow of water in the model domain. No flow boundaries are specified either when defining the boundary of the model grid or by setting grid blocks as inactive (i.e hydraulic conductivity = 0)

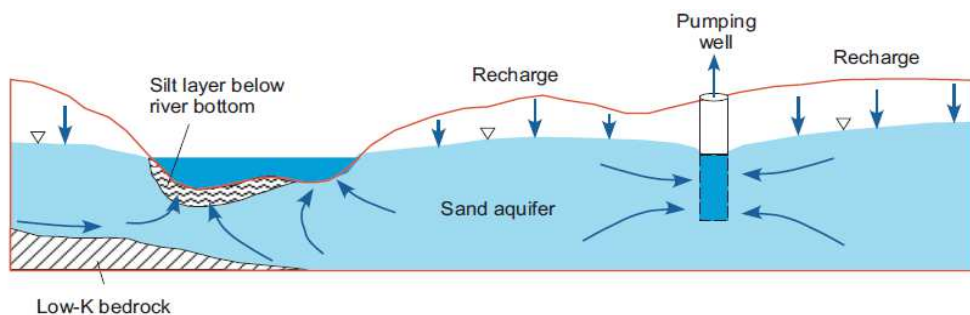


Fig. 4. Examples of flow domain boundary conditions. (Adapted from Zhang 2009).

In the figure above, the pumping well is a specified flux condition at the permeable section of the well. The recharge is a specified flux applied at the water table. The low-K bedrock is considered a special specified flux boundary (no-flow boundary). The leaky silt layer below the river is a mixed condition where the flux through the layer is proportional to the difference between the head in the river and the head in the aquifer beneath the silt layer. Where the river is in direct contact with the aquifer, there is a specified head condition.

4. Mathematical model

Mathematical models are used in simulating the components of the conceptual model and comprise an equation or a set of governing equations representing the processes that occur, for example groundwater flow, solute transport etc.

The differential equations are developed from analyzing groundwater flow (and transport) and are known to govern the physics of flow (and transport). The reliability of model predictions depends on how well the model approximates the actual natural situation in the

field. Certainly, simplifying assumptions are made in order to construct a model, because the field situations are usually too complicated to be simulated exactly.

Mathematical models of groundwater flow and solute transport can be solved generally with two broad approaches:

Analytical solution of the mathematical equation gives *exact* solution to the problem, i.e., the unknown variable is solved continuously for every point in space (steady-state flow) and time (transient flow). Analytical models are exact solution to a specified, well simplified groundwater flow or transport equation. Because of the complexity of the 3D groundwater flow and transport equations, the simplicity inherent in analytical model makes it impossible to account for variations in field conditions that occur with time and space. For these problems, (variations in field conditions) such as changes in the rate/direction of groundwater flow, stresses, changes in hydraulic, chemical and complex hydrogeologic boundary conditions, the assumptions to be made to obtain an analytical solution will not be realistic. To solve mathematical models of this nature, we must resort to approximate methods using numerical solution techniques.

Numerical solution of the mathematical equation gives *approximate* solution to the problem, i.e., the unknown variable is solved at discrete points in space (steady-state flow) and time (transient flow). Numerical models are able to solve the more complex equations of multi-dimensional groundwater flow and solute transport. Many numerical solutions to the advection-dispersion equation have been reported. The most popular techniques are as the Finite Difference Method (FDM) and Finite Element Method (FEM).

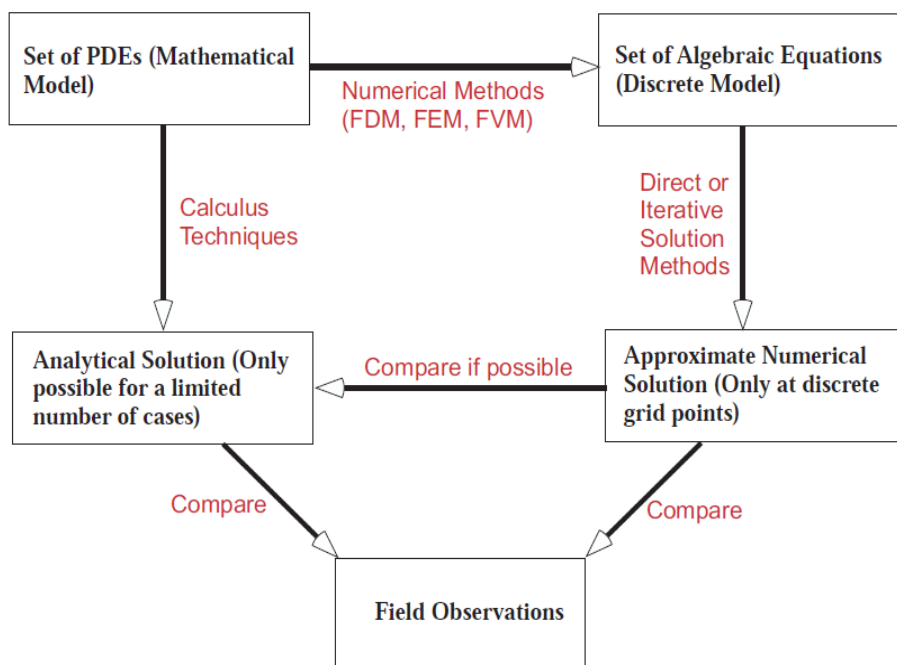


Fig. 5. Flow chart showing the approach to Mathematical model solutions (After Zhang 2009).

The characteristics of the various numerical models in comparison with analytical models are:

- The analytical solution exists at any point in the solution domain, while the numerical methods yield values for only a fixed (specified) finite number of grid points in the solution (space and time) domain.
- Using either FDM or FEM, the partial differential equation is converted to a set of algebraic equations involving unknown values at these particular points. This implies that the partial differential equations representing the balances of considered extensive quantities are replaced by a set of algebraic equations.
- Analytical solutions are not available for many problems of practical interest while the numerical methods allow us to solve the governing equation in more than one dimension, for complex boundary conditions and for heterogeneous and anisotropic aquifers, whereas most analytical solutions are restricted to consideration of homogeneous, isotropic aquifers. This implies that the solution is obtained for specified set of numerical values of the various model coefficients.

4.1 Finite difference method

A **finite difference** is a mathematical expression of the form $f(x + b) - f(x + a)$. If a finite difference is divided by $b - a$, one gets a *difference quotient*.

The primary vehicle of calculus and other higher mathematics is the function. Its "input value" is its argument usually a point ("P") expressible on a graph. The difference between two points, themselves, is known as their Delta (ΔP), as is the difference in their function result, the particular notation being determined by the direction of formation:

- Forward difference: $\Delta F(P) = F(P + \Delta P) - F(P)$;
- Central difference: $\delta F(P) = F(P + \frac{1}{2}\Delta P) - F(P - \frac{1}{2}\Delta P)$;
- Backward difference: $\nabla F(P) = F(P) - F(P - \Delta P)$.

The general preference is the forward orientation, as $F(P)$ is the base, to which differences (i.e. " ΔP "s) are added to it.

Furthermore,

- If $[\Delta P]$ is finite (meaning measurable), then $\Delta F(P)$ is known as the finite difference with specific denotations of ΔP and $\Delta F(P)$;
- If $[\Delta P]$ is infinitesimal (an infinitely small amount -/- usually expressed in standard analysis as a limit; $(\lim_{\Delta \rightarrow 0})$), then $\Delta F(P)$ is known as the infinitesimal difference with specific denotations of dP and $dF(P)$ (in calculus graphing, the point is almost exclusively identified as 'x' and $F(x)$ as 'y')

The function difference divided by the point difference gives the difference quotient

$$\text{(Newton's quotient): } \frac{\Delta F(P)}{\Delta P} = \frac{F(P + \Delta P) - F(P)}{\Delta P} = \frac{\nabla F(P + \Delta P)}{\Delta P}$$

If ΔP is infinitesimal, then the difference quotient is a derivative, otherwise it is a divided difference

The approximation of derivatives by finite differences plays a central role in finite difference methods for the numerical solution of differential equations, especially boundary value problems.

An important application of finite differences is in numerical analysis, especially in numerical differential equations, which aim at the numerical solution of ordinary and

partial differential equations respectively. The idea is to replace the derivatives appearing in the differential equation by finite differences that approximate them. The resulting methods are called finite difference methods.

A **forward difference** is an expression of the form

$$\Delta_h[f](x) = f(x+h) - f(x) \tag{32}$$

Depending on the application, the spacing h may be variable or constant.

A **backward difference** uses the function values at x and $x - h$, instead of the values at $x + h$ and x :

$$\nabla_h[f](x) = f(x) - f(x-h). \tag{33}$$

Finally, the **central difference** is given by

$$\delta_h[f](x) = f(x+1/2h) - f(x-1/2h) \tag{34}$$

The derivative of a function f at a point x is defined by the limit

$$f'(x) = \lim_{k \rightarrow 0} \frac{f(x+h) - f(x)}{h} \tag{35}$$

If h has a fixed (non-zero) value, instead of approaching zero, then the right-hand side is

$$\frac{f(x+h) - f(x)}{h} = \frac{\Delta_h[f](x)}{h} \tag{36}$$

Hence, the forward difference divided by h approximates the derivative when h is small. The error in this approximation can be derived from *Taylor's theorem*. Assuming that f is continuously differentiable, the error is

$$\frac{\Delta_h[f](x)}{h} - f'(x) = O(h) \quad (h \rightarrow 0) \tag{37}$$

The same formula holds for the backward difference:

$$\frac{\nabla_h[f](x)}{h} - f'(x) = O(h) \tag{38}$$

However, the central difference yields a more accurate approximation. Its error is proportional to square of the spacing (if f is twice continuously differentiable):

$$\frac{\delta_h[f](x)}{h} - f'(x) = O(h^2) \tag{39}$$

The main problem with the central difference method, however, is that oscillating functions can yield zero derivative. If $f(nh)=1$ for n uneven, and $f(nh)=2$ for n even, then $f'(nh)=0$ if it is calculated with the central difference scheme. This is particularly troublesome if the domain of f is discrete.

In an analogous way one can obtain finite difference approximations to higher order derivatives and differential operators. For example, by using the above central difference formula for $f'(x + h/2)$ and $f'(x - h/2)$ and applying a central difference formula for the derivative of f' at x , we obtain the central difference approximation of the second derivative of f :

$$f''(x) \approx \frac{\delta^2 h [f](x)}{h^2} = \frac{f(x+h) - 2f(x) + f(x-h)}{h^2} \quad (40)$$

More generally, the n^{th} -order forward, backward, and central differences are respectively given by:

$$\Delta_h^n [f](x) = \sum_{i=0}^n (-1)^i \binom{n}{i} f(x + (n-i)h) \quad (41)$$

$$\nabla_h^n [f](x) = \sum_{i=0}^n (-1)^i \binom{n}{i} f(x - ih) \quad (42)$$

$$\delta_h^n [f](x) = \sum_{i=0}^n (-1)^i \binom{n}{i} f\left(x + \left(\frac{n}{2} - i\right)h\right) \quad (43)$$

Note that the central difference will, for odd n , have h multiplied by non-integers. This is often a problem because it amounts to changing the interval of discretization. The problem may be remedied taking the average of $\delta^n[f](x - h/2)$ and $\delta^n[f](x + h/2)$.

The relationship of these higher-order differences with the respective derivatives is very straightforward:

$$\frac{d^n}{dx^n}(x) = \frac{\Delta_h^n [f](x)}{h^n} + 0(h) = \frac{\nabla_h^n [f](x)}{h^n} + 0(h) = \frac{\delta_h^n [f](x)}{h^n} + 0(h^2) \quad (44)$$

Higher-order differences can also be used to construct better approximations. As mentioned above, the first-order difference approximates the first-order derivative up to a term of order h . However, the combination

$$\frac{\Delta h [f](x) - \frac{1}{2} \Delta_h^2 [f](x)}{h} = \frac{f(x+2h) - 4f(x+h) + 3f(x)}{2h} \quad (45)$$

approximates $f'(x)$ up to a term of order h^2 . This can be proven by expanding the above expression in *Taylor series*, or by using the calculus of finite differences. If necessary, the finite difference can be centered about any point by mixing forward, backward, and central difference.

4.2 Basics of finite difference method

The partial differential equation describing the flow and transport processes in groundwater include terms representing derivatives of continuous variables. Finite difference method is based on the approximations of these derivatives (slopes or curves) by discrete linear

changes over small discrete intervals of space and time. A situation where the intervals are adequately small, then all of the linear increment will represent a good approximation of the true curvilinear surface.

Following an illustration in figure 6a below, Bennett (1976) used observation wells in a confined aquifer to show a reasonable approximation for the derivative of head, $\frac{\partial h}{\partial x}$, at a point (d) midway between wells 1 and 0 is given as follows:

$$\left[\frac{\partial h}{\partial x} \right]_d \approx \frac{h_0 - h_2}{\Delta x} \tag{46}$$

It is worthy to note that the observation wells are spaced at equal distance apart, likewise a reasonable approximation for second derivatives, $\frac{\partial^2 h}{\partial x^2}$ at point 0 (centre of the well) is:

$$\frac{\partial^2 h}{\partial x^2} = \frac{\left[\frac{\partial h}{\partial x} \right]_e - \left[\frac{\partial h}{\partial x} \right]_d}{\Delta x} = \frac{\frac{h_2 - h_0}{\Delta x} - \frac{h_0 - h_1}{\Delta x}}{\Delta x} = \frac{h_1 + h_2 - 2h_0}{(\Delta x)^2} \tag{47}$$

Considering also wells 3 and 4 in figure 6b located on a line parallel to the y-axis, we can also approximate $\frac{\partial^2 h}{\partial y^2}$ at point 0 (the same point 0 as figure 6a) as follows:

$$\left[\frac{\partial^2 h}{\partial y^2} \right] \approx \frac{h_3 - h_4 - 2h_0}{(\Delta y)^2} \tag{48}$$

A situation where the spacing of the well in figure 6b is equidistant ($\Delta x = \Delta y = a$), then the following approximation is as follows:

$$\frac{\partial^2 h}{\partial x^2} + \frac{\partial^2 h}{\partial y^2} \approx \frac{h_1 + h_2 + h_3 + h_4 - 4h_0}{a^2} \tag{49}$$

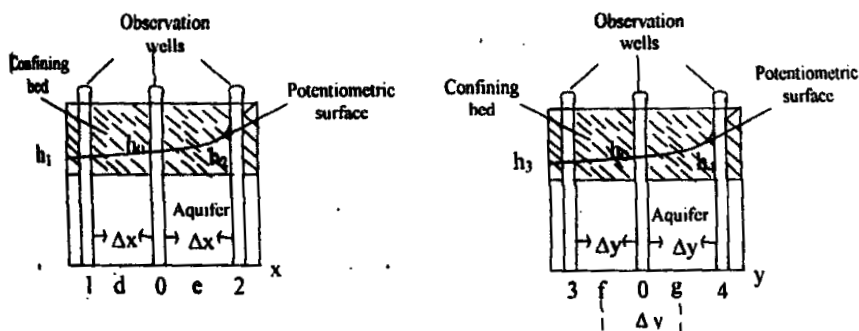


Fig. 6. Schematic cross-section through a confined aquifer to illustrate numerical approximation to derivatives of head, $\frac{\partial h}{\partial x}$ (a) and $\frac{\partial h}{\partial y}$ (b). (Modified after Bennett 1976).

These approximations can also be obtained by Taylor series expansion. A certain error is involved in the approximation of the derivatives by finite differences, but this error will generally decrease as Δx and Δy are given small values. This error is called 'truncation error' because the replacement of a derivative by a difference quotient is equivalent to a truncated Taylor series.

4.3 Taylor Series and finite difference approximations

Taylor Series Expansion: Approximation of a function h at a point $h(x + \Delta x)$ using derivatives of the function at $h(x)$.

- Forward Approximation:

$$h(x + \Delta x) = h(x) + \frac{\Delta x}{1} \frac{\partial h(x)}{\partial x} + \frac{\Delta x}{2} \frac{\partial^2 h(x)}{\partial x^2} + \frac{\Delta x}{3} \frac{\partial^3 h(x)}{\partial x^3} + \dots \quad (50)$$

If we truncate the higher order terms,

$$\text{i.e. } \frac{\Delta x}{n} \frac{\partial^n h(x)}{\partial x^n}, n \geq 2 \quad n=2, \text{ we get:}$$

$$h(x + \Delta x) \approx h(x) + \Delta x \frac{\partial h(x)}{\partial x} \Rightarrow \frac{\partial h(x)}{\partial x} \approx \frac{h(x + \Delta x) - h(x)}{\Delta x} \quad (51)$$

- Backward Approximation:

$$h(x - \Delta x) = h(x) - \frac{\Delta x}{1} \frac{\partial h(x)}{\partial x} + \frac{\Delta x}{2} \frac{\partial^2 h(x)}{\partial x^2} - \frac{\Delta x}{3} \frac{\partial^3 h(x)}{\partial x^3} + \dots \quad (52)$$

If we truncate the higher order terms ($n=2$), we get;

$$h(x - \Delta x) = h(x) - \Delta x \frac{\partial h(x)}{\partial x} \Rightarrow \frac{\partial h(x)}{\partial x} \approx \frac{h(x - \Delta x) - h(x)}{-\Delta x} \quad (53)$$

The Taylor Series is key to understanding the finite difference method.

Considering also the discretization of time, which may be viewed as another dimension and hence represented by another index. Illustrating using a hydrograph in figure 8 below, the head is plotted against time for a transient flow system; n is the index or subscript used to denote the line at which a given head is with respect to time, and it can be approximated as $\frac{\partial h}{\partial t} \approx \frac{\Delta h}{\Delta t}$. In terms of the heads calculated at specific time increments (or time slope), the slope of the hydrograph at time n can be approximated as follows:

$$\left[\frac{\partial h}{\partial t} \right]_{n\Delta t} \approx \frac{h_{n-1} - h_n}{\Delta t} \quad (54)$$

or

$$\left[\frac{\partial h}{\partial t} \right]_{n\Delta t} \approx \frac{h_n - h_{n-1}}{\Delta t} \quad (55)$$

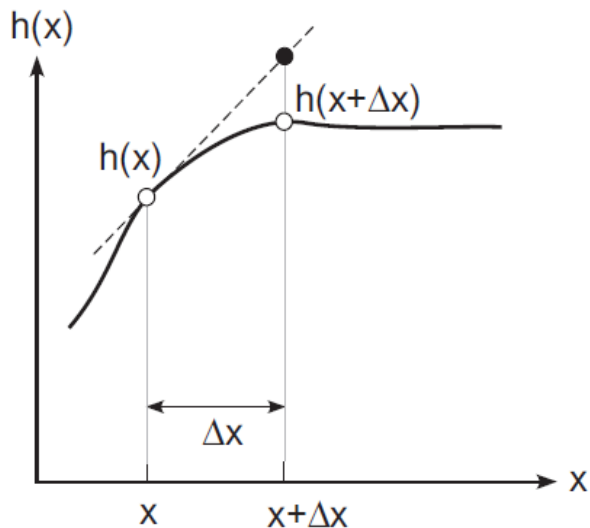


Fig. 7. Taylor series expansion along x -axis (After Zhang 2009).

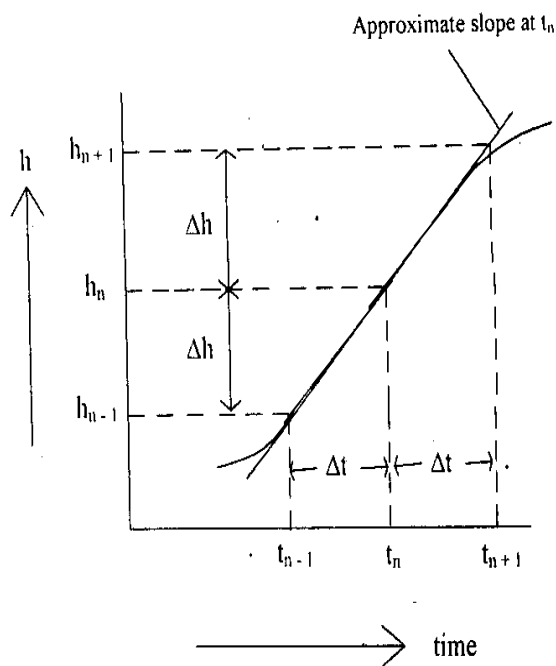


Fig. 8. Part of a hydrograph showing that the derivative (or slope $\frac{\partial h}{\partial t}$) at time node t_n may be approximated by $\frac{\Delta h}{\Delta t}$ (Konikow,1996).

4.4 The finite-difference grid

The application of a numerical model to the solution of a ground-water problem is a creative process.

There are many different techniques that can be applied to solve the same problem and each modeller has developed preferred ways of approaching a model design and the software package to use in terms of flexibility. However, no software package can be totally flexible.

Many software packages are used by modellers to interactively design a three dimensional finite-difference ground-water flow and contaminant transport models namely GV (Groundwater Vista), MODFLOW, MT3D, and MODPATH. GV model design is generic because it can be used to create data sets for MODFLOW, MT3D, and MODPATH. While each of these specific models has its own data input format, they all have key features in common. The most important features in common are the physical layout of the grid or mesh, the specification of boundary conditions, and the definition of hydraulic properties.

A finite-difference model is constructed by dividing the model domain into square or rectangular regions called **blocks** or **cells**. Head, drawdown, and concentration are computed at discrete points within the model called **nodes**. The network of cells and nodes is called the **grid** or **mesh**. These terms are used. There are two main types of finite-difference techniques, known as block-centered and mesh-centered. The name of the technique refers to the relationship of the node to the grid lines. Head is computed at the centre of the rectangular cell in the block-centered approach. Conversely, head is computed at the intersection of grid lines (the mesh) in the mesh-centered technique. The figure below illustrates this concept graphically.

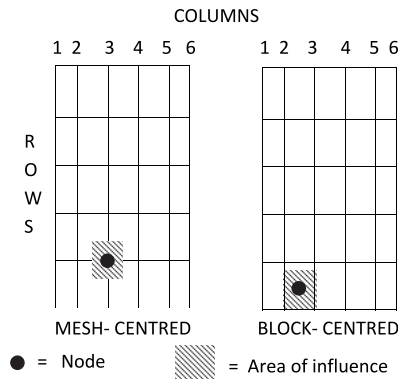


Fig. 9. The finite-difference grid.

In this figure, note that the dependent variable (head or concentration) is computed at the centre of cells in the block-centered technique but may be offset from the centre in the mesh-centered approach.

In each technique, the head and all physical properties are assumed to be constant throughout the cell region surrounding the node.

The finite-difference grid is designed by manipulating rows, columns, and layers of cells. A series of cells oriented parallel to the x-direction is called a row. A series of cells along the y-direction is called a column. A horizontal two-dimensional network of cells is called a layer. Cells are designated using the row and column co-ordinates, with the origin in the upper

left corner of the mesh. That is, the upper left cell is called (row 1, column 1). The upper layer is layer 1 and layers increase in number downward.

For example, a block-centered finite-difference grid is created in GV by first specifying the number of rows, columns, and layers.

The user also provides the initial row and column widths or spacings. GV then creates a mesh with uniform row and column widths. This is called a **regular mesh**. While the regular mesh represents the most accurate form of the finite-difference solution (Anderson and Woessner 1992), it is often necessary or desirable to refine the mesh in areas of interest. In this manner, more accuracy is achieved in key areas at the expense of lower accuracy at the edges of the model grid.

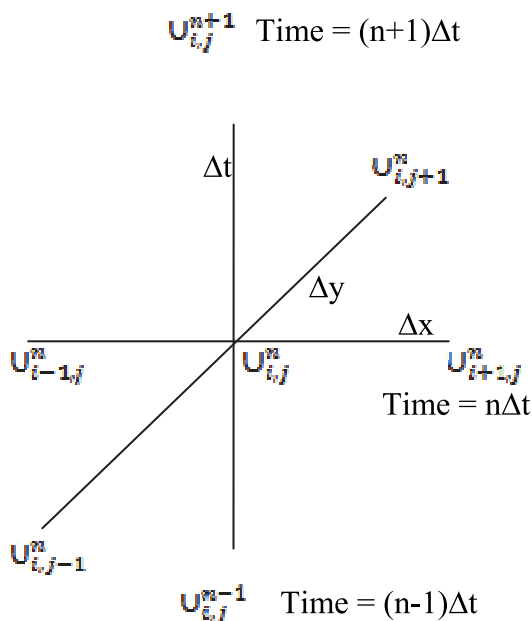


Fig. 10. Notation for forward and backward simulation of the time derivative. (Modified after Bear, 1979).

Based on the notation in the figure above, the derivatives at (i, j) for the forward, backward, central and second order of the finite difference formulas of equations (32), (33), (34) and (40) are as follows respectively:

$$\Delta_h[f](x) = f(i + 1, j) - f(i, j) \tag{56}$$

$$\nabla_h[f](x) = f(i, j) - f(i - 1, j) \tag{57}$$

$$\delta_h[f](x) = \frac{f(i + 1, j) - f(i - 1, j)}{2} \tag{58}$$

$$f''(x) \approx \frac{f(i+1, j) - 2f(i, j) + f(i-1, j)}{h^2} \quad (59)$$

Explicit Approximation: Using a nodal point (U_i^n) anywhere on the grid where 'n' is the time interval. The forward difference approximation is:

$$\frac{U_i^{n+1} - U_i^n}{\Delta t} = \frac{U_{i+1}^n - 2U_i^n + U_{i-1}^n}{(\Delta x)^2} \quad (60)$$

Therefore ,

$$U_i^{n+1} = U_i^n + \frac{\Delta t}{(\Delta x)^2} [U_{i+1}^n - 2U_i^n + U_{i-1}^n] = U_i^n + r [U_{i+1}^n - 2U_i^n + U_{i-1}^n] \quad (61)$$

Where $r = \frac{\Delta t}{(\Delta x)^2}$

$$U_i^{n+1} = r U_{i+1}^n + (1 - 2r) U_i^n + r U_{i-1}^n \quad (62)$$

r depends on interval levels assigned to Δx and Δt . Here unknown values can be calculated from known values of previous levels. Explicit method is stable if $\frac{\Delta t}{(\Delta x)^2} = 1/2$, or $0 < r < 0.5$.

it is seen from the above conditions that Δt must be very small since $\Delta t \leq 1/2 (\Delta x)^2$, and the number of computations needed to reach a time level are extremely large.

Implicit Approximation: Here backward difference approximation is used in place of forward difference, so we have

$$\left[\frac{\partial u}{\partial t} \right]_i^n = \left[\frac{\partial^2 u}{\partial x^2} \right]_i^n$$

where 'n' is the time interval and 'l' is the space interval. Therefore, the equation for backward difference approximation at $t = (n + 1) \Delta t$, we get for constant Δx as follows:

$$\frac{U_i^{n+1} - U_i^n}{\Delta t} = \frac{U_{i+1}^{n+1} - 2U_i^{n+1} + U_{i-1}^{n+1}}{(\Delta x)^2} \quad (63)$$

It is seen here that only one value is associated with the previous time level while three are associated with the present time level unlike the Explicit method.

Assuming that the values U_i^n are known at all nodes at time $n\Delta t$, equation (63) is a single with three unknowns U_i^{n+1} , U_{i+1}^{n+1} and U_{i-1}^{n+1} . Equations for each node in the flow domain can be written like that of equation (63). Since there is now one known value of head, for time $(n+1)\Delta t$, at each node, then we shall have a system of equations whereby the total number of the unknowns is equal to the total number of equations. Now, we are able to solve the

entire set of equations, getting the new value U_i^{n+1} at each node i , this is the Implicit method.

Implicit method requires much work than Explicit method in solving the set of simultaneous equations, and it is unconditionally stable irrespective of the time step Δt .

4.5 Crank-Nicholson method

In an Implicit method, the choice of Δt can be independent of Δx . Further refinement is possible. Also, the smaller the truncation error, the faster is the convergence of the finite difference equations to the differential equation.

In Implicit and Explicit methods for the time derivative $\frac{\partial u}{\partial t}$, the truncation error was of the order of $O(\Delta t)$. By replacing $\frac{\partial u}{\partial t}$ with the central difference, the truncation error associated with the time term would be reduced from $O(\Delta t)$ to $O(\Delta t)^2$. This is known as the Crank-Nicholson method.

By averaging the approximations $\frac{\partial^2 u}{\partial x^2}$ at n and $n+1$ time levels, the implicit method is obtained. At times, a weight $\lambda (0 < \lambda < 1)$ is used here. Then value for $\frac{\partial u}{\partial t}$ evaluated at $(n + \frac{1}{2})$ is obtained.

Therefore,

$$\frac{U_i^{n+1} - U_i^n}{\Delta t} = \frac{\lambda(U_{i+1}^{n+1} - 2U_i^{n+1} + U_{i-1}^{n+1}) + (1 - \lambda)(U_{i+1}^n - 2U_i^n + U_{i-1}^n)}{(\Delta x)^2} \tag{64}$$

Explicit approximation is obtained by setting $\lambda = 0$ in equation (17) while $\lambda = 1$ gives the Implicit scheme.

On the other hand, Crank-Nicholson approximation is obtained by setting $\lambda = \frac{1}{2}$ in equation (64).

$$\frac{U_i^{n+1} - U_i^n}{\Delta t} = \frac{\frac{1}{2}(U_{i+1}^{n+1} - 2U_i^{n+1} + U_{i-1}^{n+1}) + \frac{1}{2}(U_{i+1}^n - 2U_i^n + U_{i-1}^n)}{(\Delta x)^2} \tag{65}$$

Modification of equation (65) to handle problems of saturated and unsaturated flow is possible and the extension to more than one space dimension poses no difficulty.

5. Conclusion

Mathematical models are efficient tools commonly used in studying groundwater systems. Generally, mathematical models are used to simulate (or to predict) the groundwater flow and in some cases the solute and/or heat transport conditions. They may also be used in the evaluation of remediation alternatives.

Finite difference methods can be used to solve the solute transport equation, either using backward, forward or central differencing. These methods however can result in artificial oscillation (under or over shooting) or numerical dispersion due to truncation errors of the discretization. Application of backwards finite difference, results in an implicit scheme

which is always convergent but is computationally expensive, and introduces considerable numerical dispersion (Zheng and Bennett 2002).

The use of central differencing (such as Crank Nicholson schemes) in the discretization can cause numerical oscillation in the form of "wiggles" when implicit schemes are used. If an explicit formulation is used instead the solution often is non convergent (Leonard 1979). Numerical oscillation can be minimized by the use of upstream weighting, but this leads to considerable numerical dispersion owing to truncation errors (Zheng and Bennett 2002).

Another solution for artificial oscillation is the use of finer grids, with a choice based on the Peclet number: $Pe = u * \Delta x / D$

where u is the flow velocity [$L T^{-1}$], Δx is the grid spacing [L] and D is the diffusivity [$L^2 T^{-1}$]. A Pe number < 2 can greatly reduce or eliminate numerical oscillation, but usually the associated computational cost due to excessively fine grids is impractical (Zheng and Bennett 2002).

For stability of numerical techniques, the diagonal dominance check is performed, where the coefficient of the left hand side must be equal to the coefficient on the right hand side (Osuwa, J.C 2011).

Because of the associated complexities in numerical modelling, models approximate a real system and therefore are not exact descriptions of physical systems or processes. They're mathematically representing a simplified version of a system, thus expressing a range of possible outcomes reflecting the inherent assumptions.

Predictive simulations must be viewed as estimates, dependent upon the quality and uncertainty of the input data.

While using models as predictive tools, field monitoring must be incorporated to verify model predictions.

To determine model error, the examination of numerical methods through an analysis of their ability compared with analytical methods is strongly recommended.

6. References

- Anderson, M.P. and Woessner, W.W. 1992, Applied Groundwater Modeling: Simulation of Flow and Advective Transport, Academic Press, Inc., New York, 381 pp.
- American Society for Testing and Materials, 1995, Standard Guide for Subsurface Flow and Transport Modeling. ASTM Standard D 5880-95, West Conshohocken, PA, 6 p.
- Bear, J., 1979, Hydraulics of Groundwater. McGraw-Hill, New York
- Bear, J., Beljing, M. S., and Ross, R.R., 1992; Fundamentals of Groundwater Modeling, US.EPA
- Bear, J., and A. Verruijt, 1987. Modeling Groundwater Flow and Pollution. D.Reidel Publishing Company, 414 p.
- Bennett, G.D 1976. Introduction to Groundwater Hydraulics: A Programmed Text for Self-Instruction. Techniques of Water Resources Investigations of the US Geological survey, Book 3, Ch, B2; p 172.
- Chong-xi, C., and Guo-min, L., 1996; Theory and Model of Groundwater Flow and Solute Transport M]. Wuhan: Press of China University of Geosciences, 1996 (in Chinese).
- Elango, L 2005. Numerical Simulation of Groundwater Flow and Solute Transport, Allied Publishers, Chennai.

- El-Sadek, A 2007 Assessing The Impact On Groundwater Of Solute Transport In Contaminated Soils Using Numerical And Analytical Models Researcher, National Water Research Center, Fum Ismailia Egypt. *Eleventh International Water Technology Conference, IWTC11 2007 Sharm El-Sheikh, Egypt* 649.
- Franke, O.L., Bennett, G.D., Reilly, T.E., Laney, R.L., Buxton, H.T., and Sun, R.J., 1991, Concepts and Modeling in Ground-Water Hydrology -- A Self-Paced Training Course. U.S. Geological Survey Open-File Report 90-707.
- Grift B. V., and Griffioen J. 2008, Modelling Assessment of Regional Groundwater Contamination due to Historic Smelter Emissions of Heavy Metals [J]. *Journal of Contaminant Hydrology*, 2008, 96: 48-6
- Igboekwe , M.U., Gurunadha Rao, V.V.S and Okwueze., E.E. 2008. Groundwater flow modeling of Kwa Ibo River watershed, southeastern Nigeria. *Hydrological Processes* 22, 1523-1531.
- James R. C., and Alan, J. R., 2006, Finite Difference Modeling of Contaminant Transport Using Analytic Element Flow Solutions [J]. *Advances in Water Resources*, 2006, 29:1075-1087.
- Kashyap, D, 1989, Mathematical Modellingfor Groundwater Management- Status in India. Indo-French Seminar on Management of Water Resources, 22- 24 September, 1989, Festival of France-1989, Jaipur, pp. IV-59 to IV-75.
- Kinzelbach, W., 1986, Groundwater Modeling: An Introduction with Sample Programs in BASIC. Elsevier, New York, 333 p.
- Konikow, L.F., 1996. Numerical models of groundwater flow and transport. In : *Manual on Mathematical Models in Isotope Hydrogeology*, international Atomic Energy Report. IAEA-TECDOC-910, Vienna, Austria: 59-112.
- Kumar, C. P., 1992, Groundwater Modelling - In. *Hydrological Developments in India Since Independence. A Contribution to Hydrological Sciences*, National Institute of Hydrology, Roorkee, pp. 235-261.
- Kumar, C. P., 2001, Common Ground Water Modelling Errors and Remediation. *Journal of Indian Water Resources Society*, Volume 21, Number 4, October 2001, pp. 149-156.
- Kumar, C. P., 2002, Groundwater Flow Models. Scientist 'E1' National Institute of Hydrology Roorkee - 247667 (Uttaranchal) publication.
- Kutílek, M. and Nielsen, D. R. (1994). *Soil hydrology*, Catena Verlag Cremlingen-Destedt, Germany.
- Leonard, B. P. (1979). "A stable and accurate convective modelling procedure based on quadratic upstream interpolation." *Computer Methods in Applied Mechanics and Engineering*, 19: 59-98.
- McDonald, M.G. and Harbaugh, A.W. 1988, *A Modular Three-Dimensional Finite-Difference Ground-Water Flow Model*, USGS TWRI Chapter 6-A1, 586 p.
- Neumann, L.N., Cook, F., Western, A.W. and Verburg, K. (2009) A one dimensional solute transport model for hydrological response units. 18th World IMACS / MODSIM Congress, Cairns, Australia 13-17 July 2009.
- Osuwa, J.C 2011, Unpublished lecture notes on Mathematical and Numerical Methods (PHY 712). Department of Physics. Michael Okpara University of Agriculture , Umudike.

- Pinder, G.F., and Bredehoeft, J.D. 1968, *Application of the Digital Computer for Aquifer Evaluation*, Water Resources Research, Vol. 4, pp. 1069-1093.
- Rai, S. N., 2004, *Role of Mathematical modeling in Groundwater Resources management*, Sri Vinayaka Enterprises Hyderabad
- Shazrah, O., Atai, S., and Sreevdi, P.D., 2008, *Governing Equations of Groundwater Flow and Aquifer Modelling Using Finite Difference Method*. In: *GROUNDWATER DYNAMICS IN HARD ROCK AQUIFERS-Sustainable Management and Optimal Monitoring Network Design*. P186-224
- Wang, H.F. and Anderson, M.P., 1982, *Introduction to Groundwater Modeling*. W.H. Freeman and Company, San Francisco, CA, 237 p.
- Zhang, Y., 2009 *Groundwater Flow and Solute Transport Modeling*. Draft lecture note on GEOL 5030, Dept. of Geology & Geophysics University of Wyoming
- Zheng, C. and Bennett, G. D. (2002). *Applied Contaminant Transport Modeling*. New York, John Wiley & Sons.



Earth and Environmental Sciences

Edited by Dr. Imran Ahmad Dar

ISBN 978-953-307-468-9

Hard cover, 630 pages

Publisher InTech

Published online 07, December, 2011

Published in print edition December, 2011

We are increasingly faced with environmental problems and required to make important decisions. In many cases an understanding of one or more geologic processes is essential to finding the appropriate solution. Earth and Environmental Sciences are by their very nature a dynamic field in which new issues continue to arise and old ones often evolve. The principal aim of this book is to present the reader with a broad overview of Earth and Environmental Sciences. Hopefully, this recent research will provide the reader with a useful foundation for discussing and evaluating specific environmental issues, as well as for developing ideas for problem solving. The book has been divided into nine sections; Geology, Geochemistry, Seismology, Hydrology, Hydrogeology, Mineralogy, Soil, Remote Sensing and Environmental Sciences.

How to reference

In order to correctly reference this scholarly work, feel free to copy and paste the following:

M.U. Igboekwe and C. Amos-Uhegbu (2011). Fundamental Approach in Groundwater Flow and Solute Transport Modelling Using the Finite Difference Method, Earth and Environmental Sciences, Dr. Imran Ahmad Dar (Ed.), ISBN: 978-953-307-468-9, InTech, Available from: <http://www.intechopen.com/books/earth-and-environmental-sciences/fundamental-approach-in-groundwater-flow-and-solute-transport-modelling-using-the-finite-difference->

INTECH

open science | open minds

InTech Europe

University Campus STeP Ri
Slavka Krautzeka 83/A
51000 Rijeka, Croatia
Phone: +385 (51) 770 447
Fax: +385 (51) 686 166
www.intechopen.com

InTech China

Unit 405, Office Block, Hotel Equatorial Shanghai
No.65, Yan An Road (West), Shanghai, 200040, China
中国上海市延安西路65号上海国际贵都大饭店办公楼405单元
Phone: +86-21-62489820
Fax: +86-21-62489821

© 2011 The Author(s). Licensee IntechOpen. This is an open access article distributed under the terms of the [Creative Commons Attribution 3.0 License](#), which permits unrestricted use, distribution, and reproduction in any medium, provided the original work is properly cited.